



Set up with videos:

Scan QR code or visit


<https://www.tp-link.com/support/setup-video/#wi-fi-routers>




1 Connect the Hardware



Unplug the power to turn off your modem, if any, and remove the backup battery if it has one.

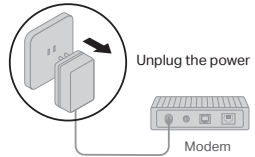


Hold the antennas from the base and push them fully into the slots.

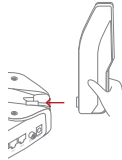

If your internet connection is through an Ethernet cable directly from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable to the router's 2.5 Giga WAN port, and then follow steps 3 and 4 to complete the hardware connection.

*Image may differ from actual product.

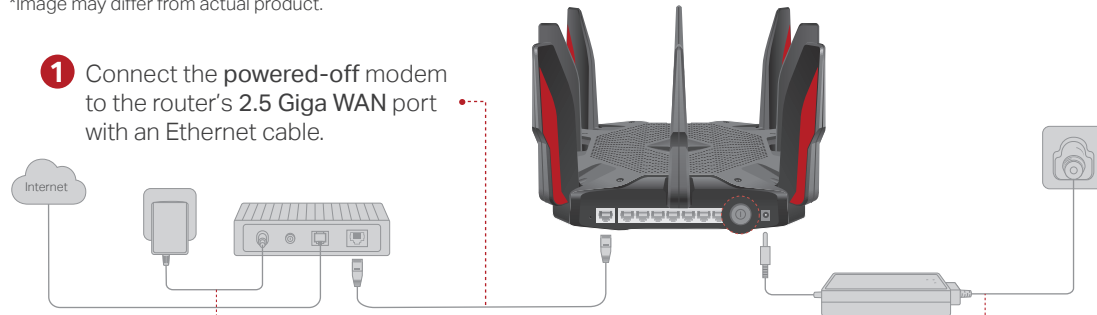

- 1 Connect the **powered-off** modem to the router's 2.5 Giga WAN port with an Ethernet cable.

- 2 Power on the modem, and then wait about **2 minutes** for it to restart.

- 4 Verify the LED on the top is solid on (red or white) before moving on.

- 3 Connect the power adapter to the router and turn on the router.

2 Configure the Router

Method ONE: Via TP-Link Tether App

1. Download the Tether app.



Scan for Tether




Tether

2. Open the Tether app and log in with your TP-Link ID.

Note: If you don't have an account, create one first.

3. Tap the **+** button in the Tether app and select **Gaming router > Archer AX11000 / Archer C5400X**. Follow the steps to complete the setup and connect to the internet.

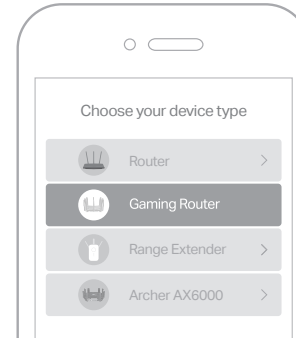

😊 Enjoy the internet !

To enjoy a more complete service from TP-Link, bind your TP-Link ID to the router.

Method TWO: Via a Web Browser


1. Connect your device to the router wirelessly or with an Ethernet cable.

The default wireless network names (SSIDs) and password are printed on the label at the bottom of the router.



2. Launch a web browser, and enter **http://tplinkwifi.net** or **http://192.168.0.1** in the address bar. Create a password to log in.


Note: If the login window does not appear, please refer to Q1 of Need Help? in this guide.

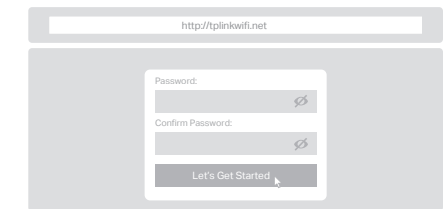

3. Follow the step-by-step instructions to set up the internet connection and register for the TP-Link Cloud service.

😊 Enjoy the internet !

LED & Button Explanation

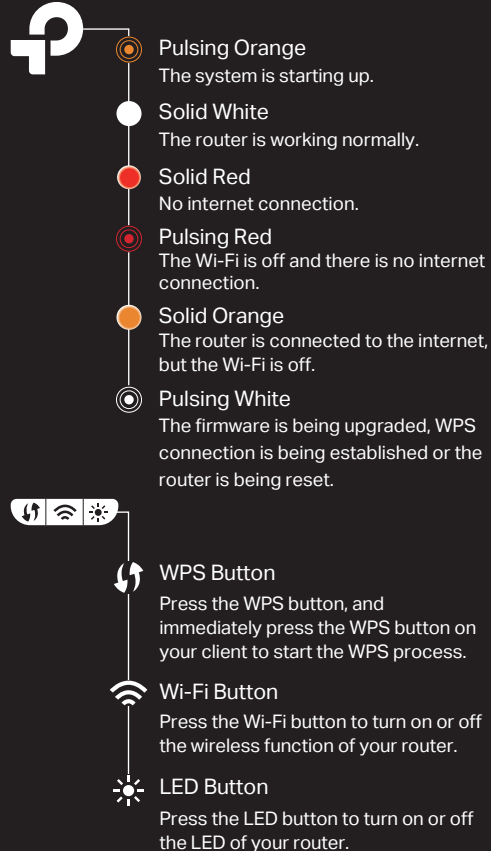

· Keep the device away from water, fire, humidity or hot environments.
 · Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
 · Do not use any other chargers than those recommended.
 · Do not use damaged charger or USB cable to charge the device.
 · Do not use the device where wireless devices are not allowed.
 · Adapter shall be installed near the equipment and shall be easily accessible.

©2021 TP-Link 7106509203 REV 2.0.0

Need Help?

- Q1. What should I do if I can't access the web management page?**
- Reboot your router and try again.
 - If the computer is set to a static IP, change its settings to obtain an IP address automatically.
 - Verify that <http://tplinkwifi.net> is correctly entered in the web browser. Alternatively, enter <http://192.168.0.1> or <http://192.168.1.1> in the web browser.
 - Use another web browser and try again.
 - Disable and enable the network adapter in use.
- Q2. What should I do if I can't access the internet?**
- Power off your modem for about 5 minutes, then power it on and check the internet. If your modem has more than one Ethernet port, keep other ports unconnected.
 - Check if the internet is working normally by connecting a computer directly to the modem via an Ethernet cable. If it is not, contact your internet service provider.
 - Log in to the web management page of the router, and go to the **Network Map** page to check whether the WAN IP address is valid or not. If it's valid, go to **Advanced > Network > Internet**, set the **Primary DNS** to 8.8.8.8, and set the **Secondary DNS** to 8.8.4.4. If it is not, check the hardware connection or contact your internet service provider.
 - For cable modem users, log in to the web management page of the router and go to **Advanced > Network > Internet > MAC Clone**. Select **Clone Current Device MAC** and click **SAVE**. Then reboot both the modem and the router.
- Q3. What should I do if the router can't be found via Bluetooth in Tether (how to reset the router)?**
- The router's Bluetooth will be enabled for 30 minutes following a reset to factory defaults. There are two ways to reset the router:
- With the router powered on, use a pin to press and hold the **Reset** button on the back of the router until the LED blinks.
 - Log in to the web management page of the router. Go to **Advanced > System > Backup & Restore**, and click **FACTORY RESTORE**. The router will reset and restart automatically.

- To communicate with TP-Link users or engineers, visit <https://community.tp-link.com> to join the TP-Link Community.
- For technical support, replacement services, the user guide and more information, please visit <https://www.tp-link.com/support>
- If you have any suggestions or needs for our product guides, you are welcome to email techwriter@tp-link.com.cn.

Quick Installation Guide



Next-Gen Tri-Band Gaming Router

Archer AX11000

